4.5 Digital output module ICSO 08 Y1, 8 channels 24 V DC, 2 A Outputs and CS31 system bus interface electrically isolated

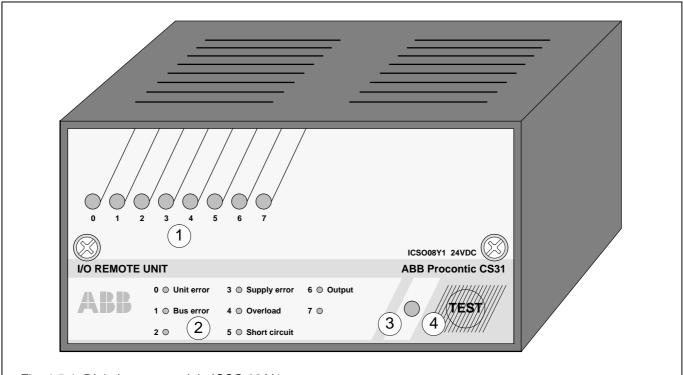


Fig. 4.5-1: Digital output module ICSO 08 Y1

Contents

Intended purpose	4.5-1
Display and operating elements on the front panel	4.5-1
Electrical connection	4.5-1
Addressing	4.5-4
I/O configuration	4.5-4
Normal operation	4.5-4
Diagnosis and displays	4.5-4
Technical data	4.5-5
Dimensions for installation	4.5-6

Intended purpose

The digital output module ICSO 08 Y1 is used as a remote module on the CS31 system bus. It contains 8 output channels with the following features:

- The outputs
 - are electrically isolated
 - have a rated voltage of 24 V DC
 - work with transistors
 - are overload and short-circuit proof and
 - can be loaded with 2 A.
 Note: The minimum load must be ≥ 50 mA. If the load is lower than 50 mA, the safe OFF state cannot be guaranteed because of the output leakage current. (Recommendation: Use module ICSC 08 L1, if the loads are lower than 50 mA.)

The module is available for supply voltages of 24 V DC and 230 V AC.

For electrical connection, it has to be mounted on a plugin base ECZ.

The CS31 system bus interface is electrically isolated from the rest of the module.

The module offers a number of diagnosis functions (see chapter "Diagnosis and displays").

Display and operating elements on the front panel

- 8 yellow LEDs to indicate the signal status of the outputs or for displaying error and diagnosis data
- List of diagnosis information concerning the LEDs when they are used for diagnosis display
- 3 Red LED for error message
- 4 Test button

Electrical connection

The module has to be mounted on the plug-in base ECZ and then fastened with two screws. The plug-in base has a mechanical coding which prevents that a module can be plugged-in with another supply voltage than set on the ECZ. Before mounting the input module, the mechanical coding has to be set to the correct supply voltage.

The following two figures show the electrical connection of the output module.

Advant Controller 31 / Issued: 09.99 Hardware 4.5-1 ICSO 08 Y1


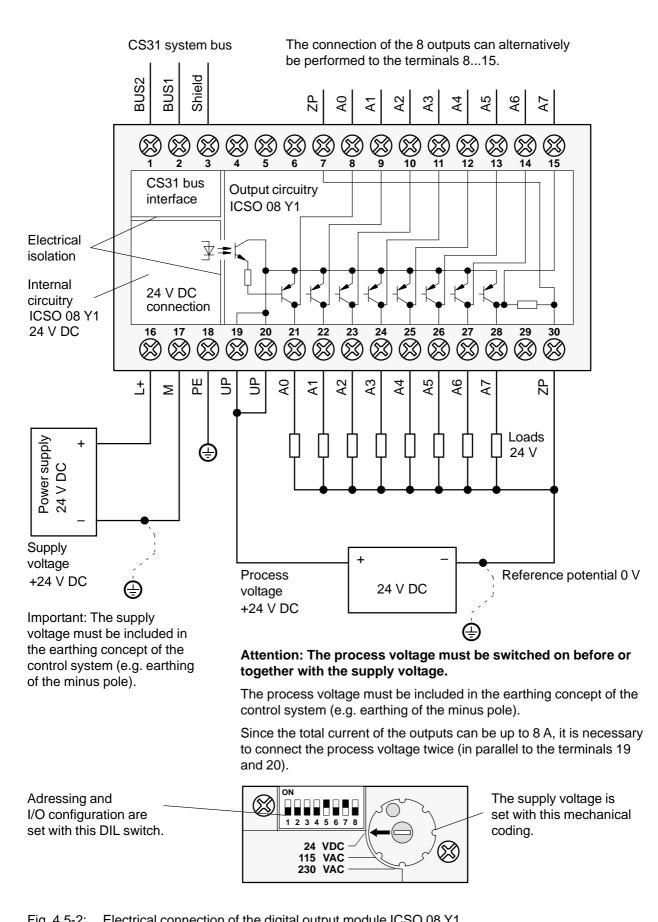


Fig. 4.5-2: Electrical connection of the digital output module ICSO 08 Y1, supply voltage 24 V DC

ICSO 08 Y1 4.5-2 Hardware Advant Controller 31 / Issued: 09.99

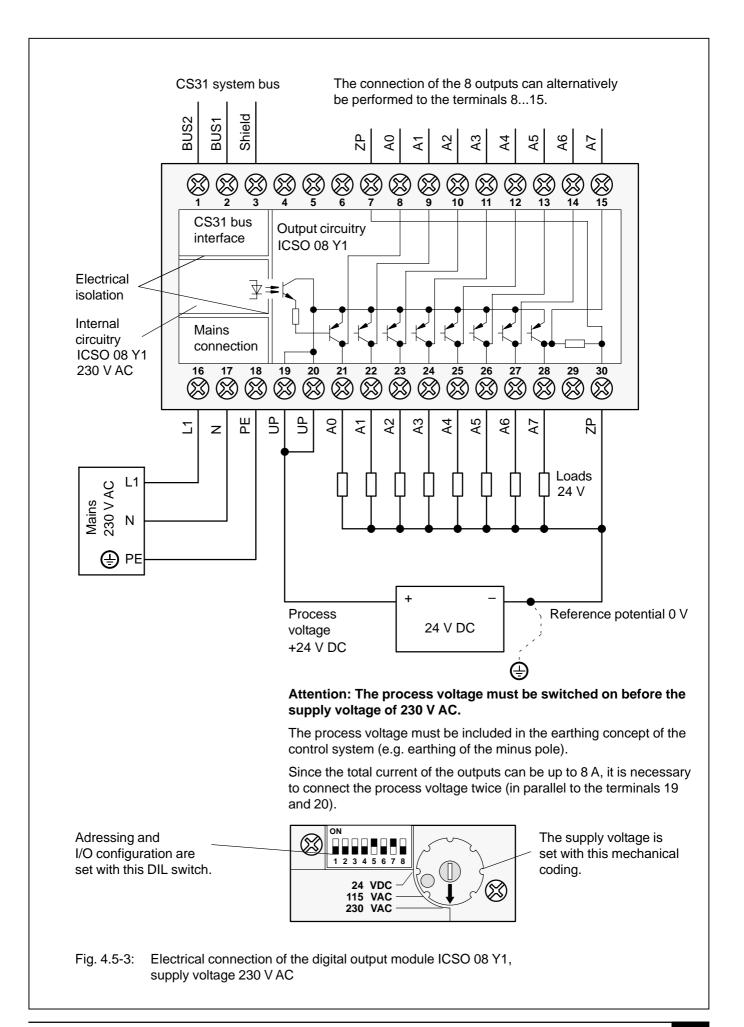

Advant Controller 31 / Issued: 09.99 Hardware 4.5-3 ICSO 08 Y1

Addressing

An address must be set for each module to enable the basic unit to correctly access the outputs.

A detailed description about "Addressing" can be found in the chapter "Addressing" of the basic units and couplers.

The address setting is accomplished with the DIL switch on the plug-in base ECZ. When using the basic units 07 KR 91 and 07 KT 9x as bus masters, the following address assignments are valid:

Basic unit	07 KR 91 / 07 KT 9x		
DIL switch No. 8 on the ECZ	OFF (recommended)	ON	
Channel			
A0 A1 A2 A3 A4 A5 A6	A xx,00 A xx,01 A xx,02 A xx,03 A xx,04 A xx,05 A xx,06 A xx,07	A xx,08 A xx,09 A xx,10 A xx,11 A xx,12 A xx,13 A xx,14 A xx,15	

xx: Group number of the address, set on the DIL switch of the plug-in base with the switches 2...7. Recommended addresses with 07 KR 91 / 07 KT 9x as bus masters: 08, 10, 12...60 (even-numbered addresses)

The module uses 8 outputs on the CS31 system bus.

I/O configuration

An I/O configuration is not necessary.

Normal operation

- After power ON the module initializes automatically.
 During this period the red LED (3) flashes.
- After initialization the red LED (3) goes out, if the bus runs correctly and if the module has detected no error.
- The 8 yellow LEDs (1) indicate the signal statuses of the channels A0...A7.

Diagnosis and displays

Diagnosis functions:

- Error inside the module
- Error on the CS31 system bus
- Process voltage is OFF
- Overload
- Short-circuit

If one of these errors occurs, the red LED (3) lights up.

Using the test button (4) and the LEDs (1), diagnosis information can be achieved directly at the module.

By pressing the test button the first time, the channel **A0** is selected: LED**0** flashes. After releasing the test button, the diagnosis information of this channel is displayed with the 8 yellow LEDs for a period of ca. 3 seconds.

The ON status of the LEDs means:

- 0 Error inside the module (Unit error)
- 1 Error on the CS31 system bus (Bus error)
- 2 not used
- 3 Process voltage is OFF (Supply error)
- 4 Overload
- 5 Short-circuit
- 6 Configuration as an output (Output)

The meaning of the LEDs (2) is also printed on the front panel of the module in English.

With every further pushing and releasing the test button, the described procedure repeats for the other channels.

After calling up the last channel (A7), a lamp test (LED test) is performed when the test button is pushed again. All the 8 LEDs must light up.

After releasing the test button, the 8 LEDs show the setting of the DIL switches of the plug-in base for a period of ca. 5 seconds. LED0 shows switch 1 (LEDs 0...7 belong to the switches 1...8).

All error messages are stored in the module. They can be deleted in the following ways:

- by pressing the test button for about 10 seconds or
- with power OFF/ON or
- via the CS31 system bus.

Diagnosis data, which can be evaluated, are also sent to the basic units and couplers which work as the bus master.

For further details see the chapter "Diagnosis" in the description of the basic units and couplers.

After finishing the diagnosis procedure, the 8 LEDs again show the signal statuses of the channels. The same is valid for the pauses between the steps of the procedure.

2 ICSO 08 Y1 4.5-4 Hardware Advant Controller 31 / Issued: 09.99

Technical data

General data of the module

Versions		R 1022	R0026
Rated supply vo	ltage	24 V DC	230 V AC, 50 or 60 Hz
Max. current con	nsumption without output loads	0.2 A	
Max. power con	sumption without output loads		6 VA
Max. power diss	sipation in the module	6 W	8 W
Max. conductor cross section of the terminals (flexible lead with wire end ferrule)		2 cores of 2.5 mm ² per terminal	
Weight	Plug-in base ECZ Module ICSO 08 Y1	200 g 250 g	200 g 430 g

Technical data of the outputs

Number of outputs per module max. 8 (short-circuit and overload proof,

electrically isolated)

Process supply voltage UP 24 V DC

Signal level of the outputs with signal 1 UP, (max. internal voltage drop 0.5 V)

Leakage current with signal 0 < 4 mA

Loadability of the outputs

Rated current 2 A

Lamp load max. 15 W
Total current of the 8 outputs max. 8 A

Switching frequency with inductive load max. 0.1 Hz

Overload indication yes

Short-circuit switch-off / short-circuit indication yes

Limitation of inductive switch-off voltage by suppressor diode

Signalling 1 yellow LED per channel

Advant Controller 31 / Issued: 09.99 Hardware 4.5-5 ICSO 08 Y1

Mechanical data

Installation methods

on a DIN rail or fastening by screws

Mounting depth including the

plug-in base and a flat DIN rail

Dimensions of the plug-in base (see the drawing below)

snapping onto the DIN rail fastening by M4 screws


max. outline dimensions of the plug-in base

117 mm

centrally between top and bottom of the plug-in base

102 mm x 22 mm

124 mm x 64 (+12) mm

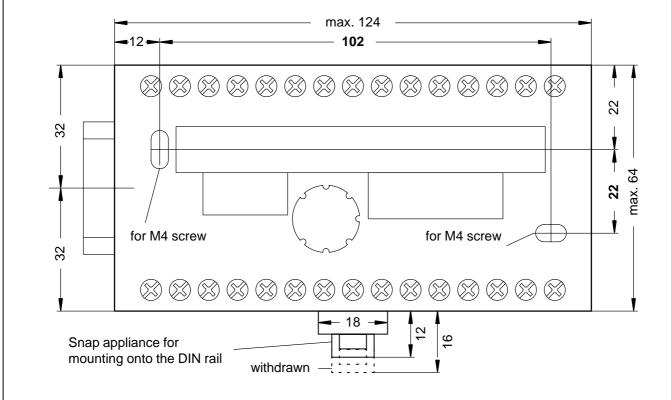

The dimensions for mounting with screws are shown in **bold** print.

Fig. 4.5-4: Mounting the plug-in base ECZ for installation of the output module ICSO 08 Y1

Ordering data

Order numbers

Plug-in base ECZ FPR3700001R0001 Module ICSO 08 Y1 24 V DC FPR3311101R1022 Module ICSO 08 Y1 230 V AC FPR3311101R0026