

3500/04 Internal Barriers

Datasheet

Bently Nevada Machinery Condition Monitoring

Description

3500 Internal Barriers are intrinsically safe interfaces that provide explosion protection for transducer systems connected directly to the 3500 Machinery Protection System.


The internal barriers are fully compatible with the 3500 System and provide a convenient and cost-effective solution for installing all types of transducer systems within a hazardous area.

Unlike external barriers, 3500 Internal Barriers are an integral part of the 3500 System and will not degrade the system's performance.

We offer Bently Nevada transducer systems with comprehensive approvals for hazardous area installations. The transducer systems are matched to those of the 3500 Internal Barriers. [See "Compatible Monitors & Transducers" on page 6.](#)

Each component complies both individually and as part of a system with the safety requirements of North American and international standards. Hence, you don't have to reference individual certificates to verify the compatibility between components.

Standard and internal barrier monitors can reside within the same 3500 rack. You can upgrade standard monitors by replacing existing I/O modules with those that contain internal barriers.

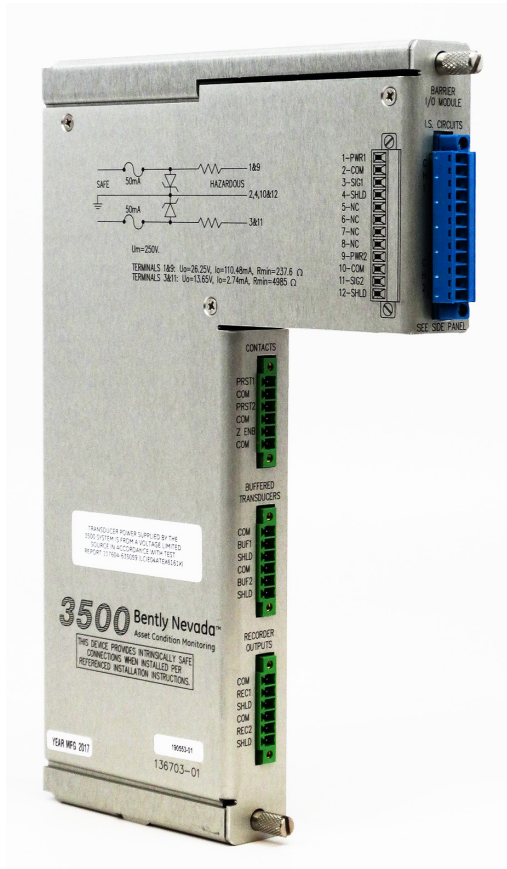

Installation Guidelines

The internal barriers for a 3500 rack are incorporated in special Monitor I/O Modules. These barriers provide explosion protection for transducer systems that are connected to the 3500 system. An intrinsically safe (IS) earthing module provides the IS earth connection through the 3500 system backplane.

The IS Earth Module requires a dedicated I/O module position and precludes the use of this monitor position for other 3500 System modules. This limits a standard 19-inch rack to 13 monitor positions. Furthermore, a number of installation options are not available when internal barriers are installed in a 3500 rack.

New Rack Installations

The same rack can contain both internal barrier and standard I/O module types without compromising the separation between hazardous and safe area field wiring.

The External Termination option is not available for I/O modules with internal barriers because hazardous area approvals do not allow the use of intrinsically safe wiring within a multi-cored cable assembly.

Monitors that contain Triple Modular Redundant (TMR) rack options cannot use internal barrier I/O modules since connecting a transducer to multiple I/O module inputs will compromise the integrity of the IS system.

A rack that contains any internal barrier module must have a 3500/04-01 IS Earthing Module to provide the Barrier Module IS earth connection.

I/O Module Positioning

Internal barrier I/O modules have an increased depth over that of standard barrier I/O modules. Consider the rack position with respect to adjacent modules to ensure that you can easily access the I/O modules during maintenance.

Internal barrier I/O and IS Earthing modules can occupy any general-purpose rack position and can be adjacent to standard I/O module types

without compromising the 50 mm (2 in) physical separation requirement between safe and hazardous area field wiring.

Follow these guidelines when positioning I/O modules:

- Group all internal barrier I/O modules in adjacent rack positions to simplify the installation.
- Place the IS Earthing Module in a rack position that provides easy access for routine online maintenance.
- Consider the IS Earthing Module's positioning relative to adjacent internal barrier I/O modules and cabinet bulkheads.

If you plan to install standard I/O modules or the IS Earthing Module between a pair of internal barrier I/O modules, allow a minimum of two rack positions so that you can easily access the standard I/O or IS Earthing Module online without disturbing the adjacent I/O modules.

Upgrading a 3500 Rack

To upgrade a 3500 rack with standard I/O modules to a rack containing one or more internal barrier I/O modules, replace the standard I/O modules with the appropriate internal barrier modules. You can order the IS Earthing Module separately. [See "Ordering Information" on page 6.](#) for more information.



The IS Earthing Module must be installed in a dedicated monitor position.

Revision 2.3 or later of 3500 Rack Configuration software is required to enable the use of internal barriers with the following monitor types:

- 3500/25
- 3500/40
- 3500/42
- 3500/50
- 3500/60
- 3500/61
- 3500/62
- 3500/70
- 3500/72

The following firmware revisions are required:

Monitor	Firmware Version	Firmware Rev
3500/25	1.06	D or later
3500/50	1.05	E or later
3500/60	1.06	E or later
3500/61	1.06	E or later
3500/62	1.06	C or later

No firmware revisions are required for the following monitors:

- 3500/40M
- 3500/42M
- 3500/70M
- 3500/72M

Cabinet and Panel Installations

The internal barrier I/O modules add approximately 50 mm (2 in) to the depth of the rack to provide the 50 mm (2 in) physical separation between safe and hazardous area field wiring. Hence, a standard rack with internal barrier modules will not fit into a 400 mm cabinet.

The bulkhead rack version is available for installations that require this cabinet type. A standard rack with internal barrier modules will fit comfortably in a 600 mm cabinet and the 3500/06 Weatherproof Housing.

We recommend the following installation guidelines for the internal barriers within a cabinet or panel:

- The positioning of the hazardous and safe area connectors dictates installations route the hazardous area field wiring above the 3500 rack and safe area wiring below the 3500 Rack.
- Installations should carefully route the safe area wiring from the bulkhead version along the top of the 3500 rack to maintain the 50 mm (2 in) separation between safe and hazardous area wiring.

When multiple racks are installed within the same cabinet, hazardous area and safe area wiring can share the same cable trays as long as a separator is physically insulating the wires from one another.

Specifications

Physical Information

Internal Barrier I/O Module	
Dimensions (Height x Width x Depth)	241.3 mm x 24.4 mm x 163.1 mm (9.50 in. x 0.96 in. x 6.42 in.)
Weight	0.46 kg (1.01 lb)

Internal Barrier Earthing Module	
Dimensions (Height x Width x Depth)	241 mm x 24.4 mm x 103.1 mm (9.50 in. x 0.96 in. x 4.06 in.)
Weight	0.201 kg (0.443 lb.)

Proximity & Acceleration

The following information also applies to aeroderivative and dynamic pressure.

Bandwidth	30 kHz
Amplitude Accuracy	3% @ 10 kHz, -15/+10% @ 30 kHz
Phase Accuracy	-11° @ 10 kHz
Channel Parameters	U _m = 250 V U _o = 27.45 V I _o = 113.24 mA C _o = 0.086 uF L _o = 2.77 mH P _o = 726.96 mW

Circuit Parameters	
Power (PWR)	U _o = 26.25 V R _{min} = 237.6 Ω I _o = 110.48 mA
Signal (SIG)	U _o = 13.65 V R _{min} = 4985 Ω I _o = 2.74 mA

Velomitor Sensor

Amplitude Accuracy	±1%
Circuit Parameters	U _o = 26.25 V R _{min} = 297 Ω I _o = 88.39 mA
Channel Parameters	U _m = 250 V U _o = 26.25 V I _o = 88.39 mA C _o = 0.097 uF L _o = 4.55 mH P _o = 580.02 mW

Temperature

Temperature Accuracy	±1 °C @ +25 °C, ±15 °C over operating temperature
Phase Accuracy	-11° @ 10 kHz
Channel Parameters	U _m = 250 V U _o = 7.71 V I _o = 89.17 mA C _o = 9.3 uF L _o = 4.55 mH P _o = 132.41 mW

Circuit Parameters	
Channel B	U _o = 5.36 V R _{min} = 133.25 Ω I _o = 40.23 mA
Channel C	U _o = 6.51 V R _{min} = 133.25 Ω I _o = 48.86 mA

Process Variable

Channel Parameters	U _m = 250 V U _o = 27.98 V I _o = 279.34 mA C _o = 0.083 uF L _o = 0.455 mH P _o = 842.89 mW
--------------------	--

Circuit Parameters	
Power (PWR)	U _o = 26.78 V R _{min} = 297 Ω I _o = 90.17 mA
Signal (SIG)	U _o = 9.56 V R _{min} = 50.58 Ω I _o = 189.01 mA

Compliance and Certifications

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

EMC

European Community Directive:

EMC Directive 2014/30/EU

Standards:

EN 61000-6-2 Immunity for
Industrial Environments

EN 61000-6-4 Emissions for
Industrial Environments

Electrical Safety

European Community Directive:

LV Directive 2014/35/EU

Standards:

EN 61010-1

European Community Directive:

RoHS Directive 2011/65/EU

ABS - Marine and Offshore Applications

DNV GL Rules for Classification – Ships,
Offshore Units, and High Speed and Light
Craft

Hazardous Area Approvals



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from www.Bently.com.

CSA/NRTL/C

Class I, Zone 2: AEx/Ex nA nC ic IIC
T4 Gc;

 
Class I, Zone 2: AEx/Ex ec nC ic IIC
T4 Gc;

Class I, Division 2, Groups A, B, C,
and D;

T4 @ Ta= -20°C to +65°C (-4°F to
+149°F)

When installed per drawing 149243
or 149244.

ATEX/IECEx



II 3 G
Ex nA nC ic IIC T4 Gc

Ex ec nC ic IIC T4/T5 Gc

T4 @ Ta= -20°C to +65°C (-4°F to
+149°F)

When installed per drawing 149243
or 149244.

Ordering Information



For the detailed listing of country and product specific approvals, refer to the *Approvals Quick Reference Guide* (108M1756) available from www.Bently.com.

3500/04-01	IS Earthing Module
-------------------	---------------------------

When ordering internal barriers, specify the appropriate I/O module type for each monitor module.



Install an IS Earthing Module in each rack containing internal barriers.

Refer to each monitor module's datasheet for specifications and ordering information.

Spares

136719-01	Earthing I/O Module
138257-01	Earthing Module Front Panel
135473-01	3500/25 I/O Module with Internal Barriers and Internal Terminations
135489-01	3500/42, /70, /72 I/O Module with Internal Barriers (4 prox/accel channels) and Internal Terminations
135489-02	3500/42, /70 I/O Module with Internal Barriers (2 prox/accel + 2 Velomitor channels) and Internal Terminations
135489-03	3500/42, /70 I/O Module with Internal Barriers (4 Velomitor channels) and Internal Terminations
135489-04	3500/40 I/O Module with Internal Barriers and Internal Terminations
136703-01	3500/50 I/O Module with Internal Barriers and Internal Terminations
136711-01	3500/60 I/O Module with Internal Barriers and Internal Terminations
136711-02	3500/61 I/O Module with Internal Barriers and Internal Terminations
137110-01	3500/62 I/O Module with Internal Barriers and Internal Terminations

Compatible Monitors & Transducers

Compatible Monitors	3500/25 Keyphasor Monitor	
	3500/40M Proximitor Monitor	
	3500/42M Proximitor/Seismic Monitor	
	3500/44M Aeroderivative (only with mods)	
	3500/50 Tachometer Monitor	
	3500/60 Temperature Monitor	
Compatible Transducer Systems	3500/61 Temperature Monitor with Recorders	
	3500/62 Process Variable Monitor	
	3500/64 Dynamic Pressure Monitor (only with mods)	
	3500/70M Recip Impulse/Velocity Monitor	
	3500/72M Recip Rod Position Monitor	
	Proximity	3300 XL Proximitor Sensor 3300 5 mm Proximitor Sensor 3300 XL 8 mm Proximitor Sensor 3300 RAM Proximitor Sensor 7200 5 & 8 mm Proximitor Sensor
	Acceleration	23733-03 Standard Acceleration Transducer 330400 Standard Integral Acceleration Transducer 330425 Standard Integral Acceleration Transducer 49578-01 Standard Acceleration Transducer Modified 86517 Interface Module
	Velocity	Velomitor Sensor High Temperature Velomitor Sensor
	Temperature	3-wire Thermocouples: Type J Type K Type E Type T
		3-wire RTDs: 10 Ω 3-wire Copper 100 Ω 3-wire Platinum 120 Ω 3-wire Nickel
Process Variable	+4 to +20 mA	

The Internal Barrier system does not support the following transducer systems:

- 11 mm, 14 mm, 16 mm, 25 mm, 35 mm, or 50 mm Proximitors Sensors
- Velocity Seismoprobe Sensors (/42)
- Velocity-to-Displacement Converter (/40)
- Magnetic pick-up (/50)
- 4-wire RTDs and Thermocouples (/60, /61)
- 1-5 Vdc Process Variables (/62)
- 0-10 Vdc Process Variables (/62)

Internal barriers are compatible with **approved** Bently Nevada transducer systems. For all other transducer systems, please consult your local Bently Nevada sales professional.

Graphs and Figures



Figure 1: Typical Internal Barrier I/O Module

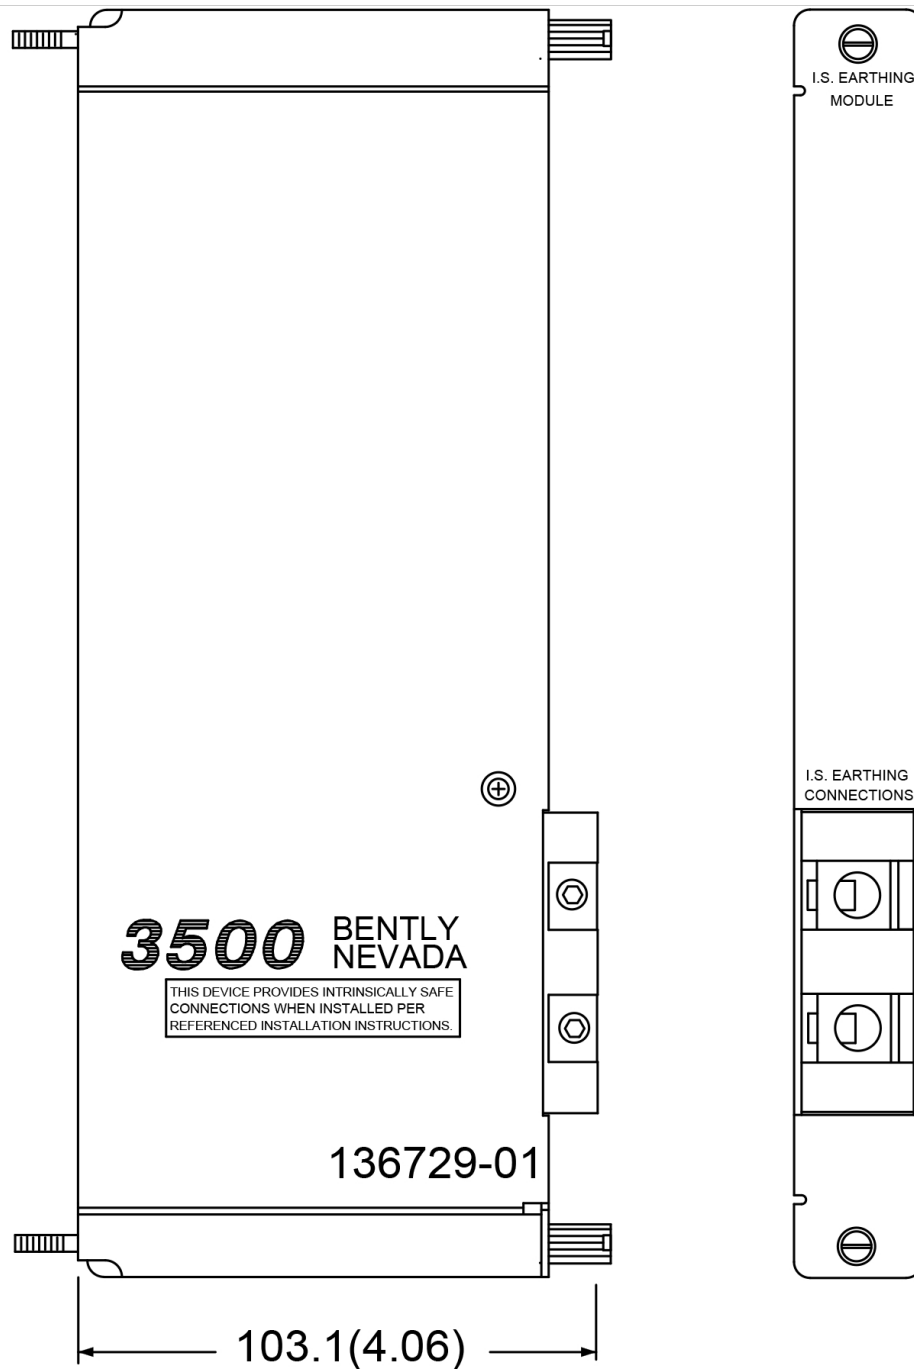


Figure 2: Rear views of the 3500/04-01 Internal Barrier Earthing Module
Dimensions are in millimetres (inches)

Copyright 2019 Baker Hughes, a GE company, LLC ("BHGE") All rights reserved.

Bently Nevada, Orbit Logo, Keyphasor, Seismoprobe and Velomitor are registered trademarks of BHGE in the United States and other countries. All product and company names are trademarks of their respective holders. Use of the trademarks does not imply any affiliation with or endorsement by the respective holders. This product may be covered by one or more patents, see Bently.com/legal for current status.

The information contained in this document is subject to change without prior notice.

1631 Bently Parkway South, Minden, Nevada USA 89423

Phone: 1.775.782.3611 Bently.com

