



TOYOTA

ALWAYS A
BETTER WAY

Yaris

Front bumper garnish

Installation Instructions


Model year: As from 2020/06
Vehicle code: **P*11-BH***W
Part number: PW401-0D002-**

Manual reference number: AIM 004 583-0

Revision record

Rev. No.	Date	Page	Step	Remarks

PW401-0D002-**

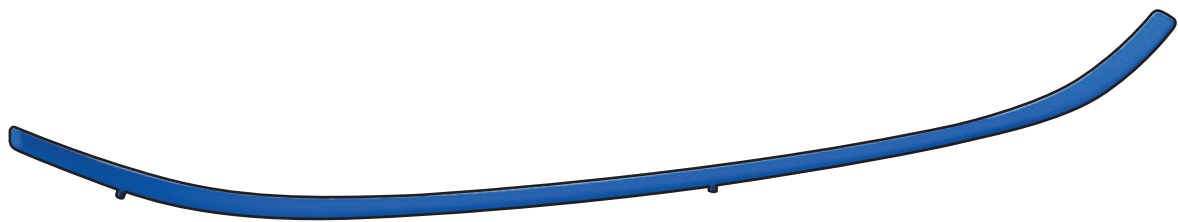


A

x1



x3

Adhesion Promoter



C

x1

= XX mm	=	=
= XX mm	=	=
=	=	=
= TXX	=	= START

	DEGREASER CLEANER AIM 003-516-*		+ °C	? °C	
	Ø 3,5 mm Ø 5 mm Ø 9 mm		10mm	10mm Click	

INFO










Material Safety Data Sheet




Technical Data Sheet

20°C - 40°C

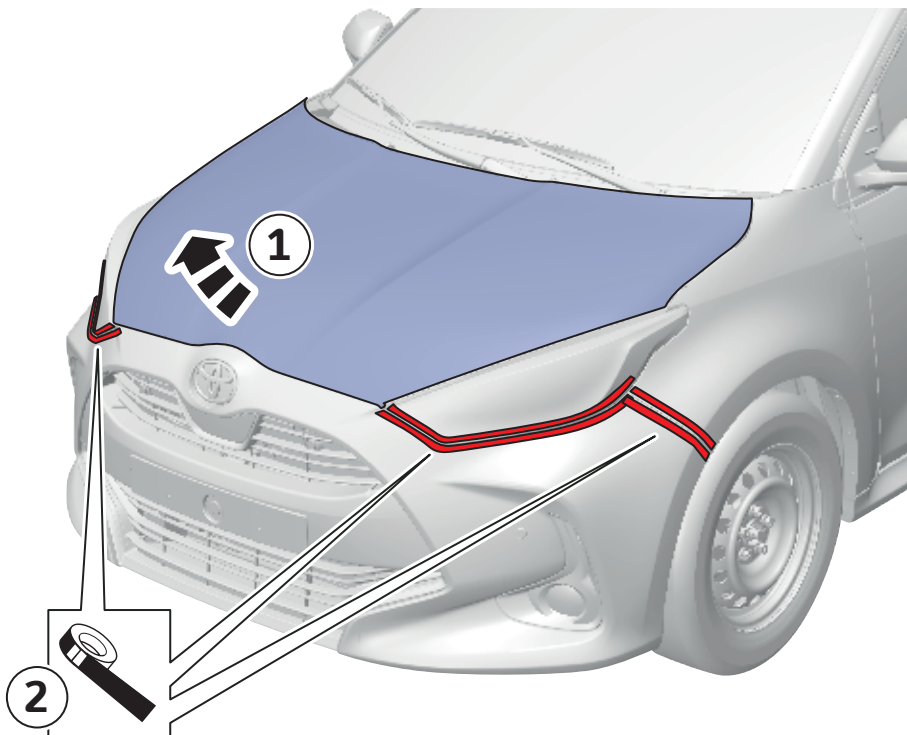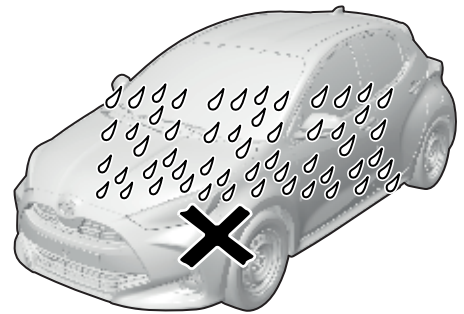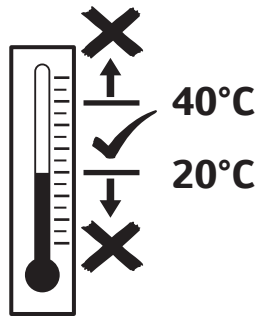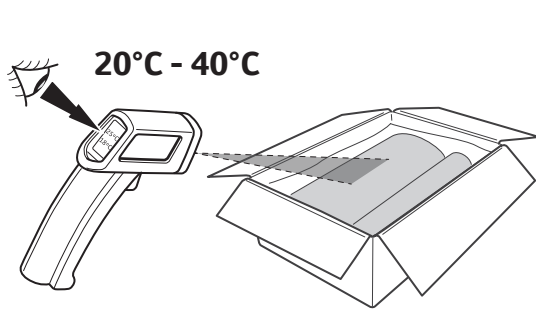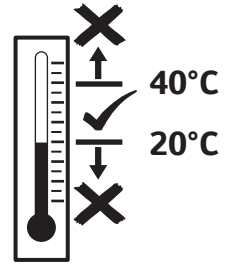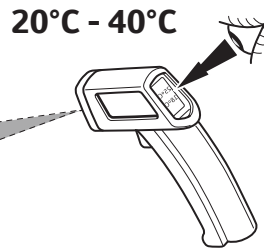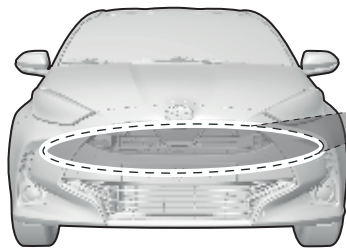


1

CONV

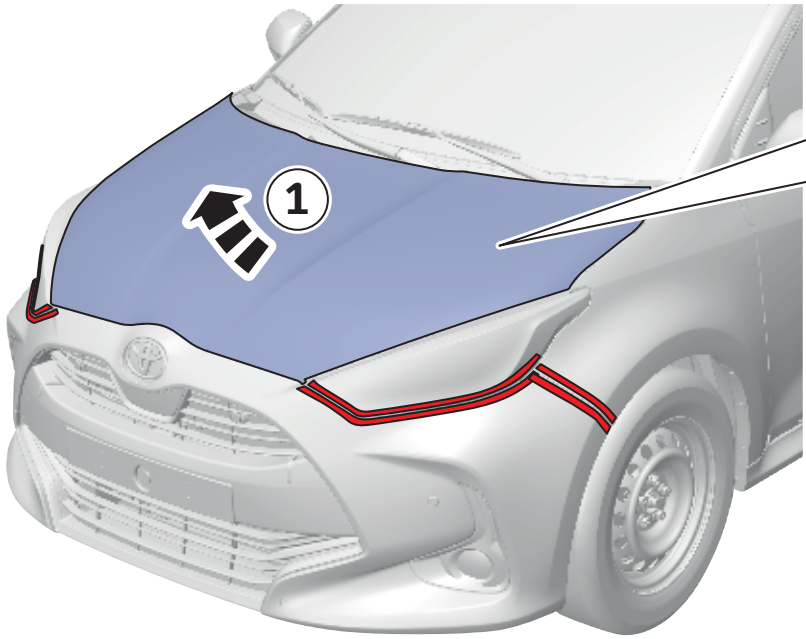

2 1x
10mm

HV



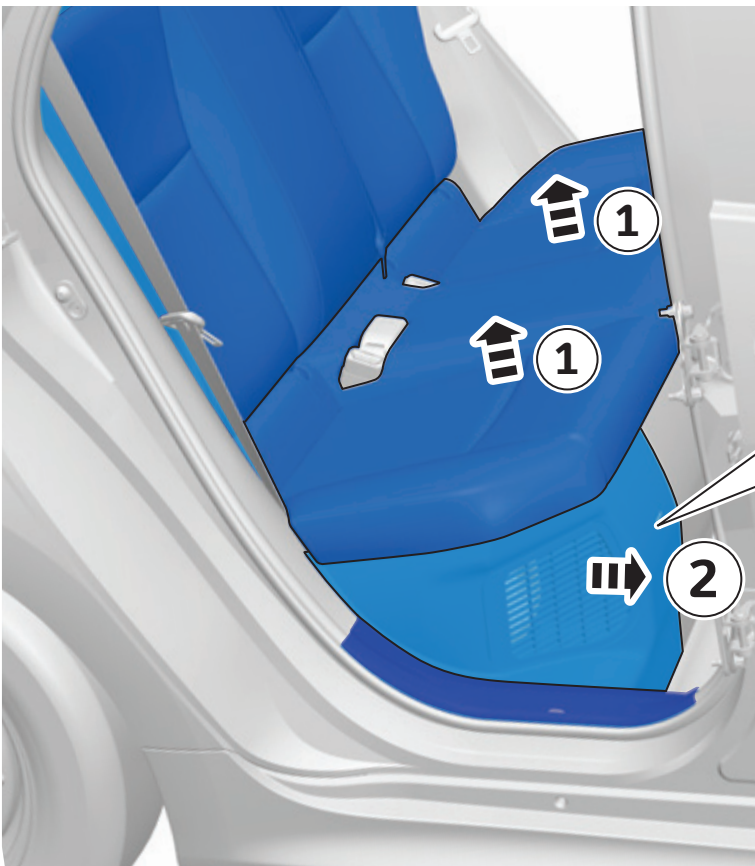


= 4x



= 3x

= 2x

3 1x
10mm

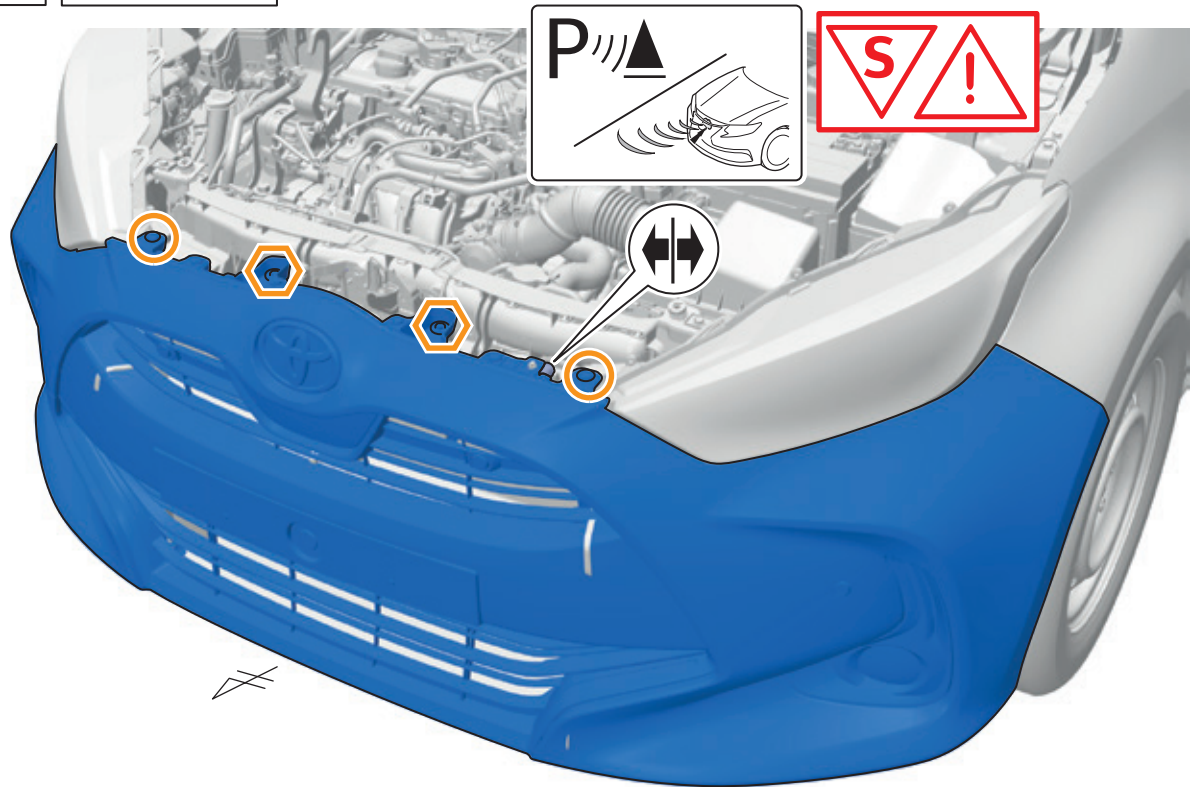




3

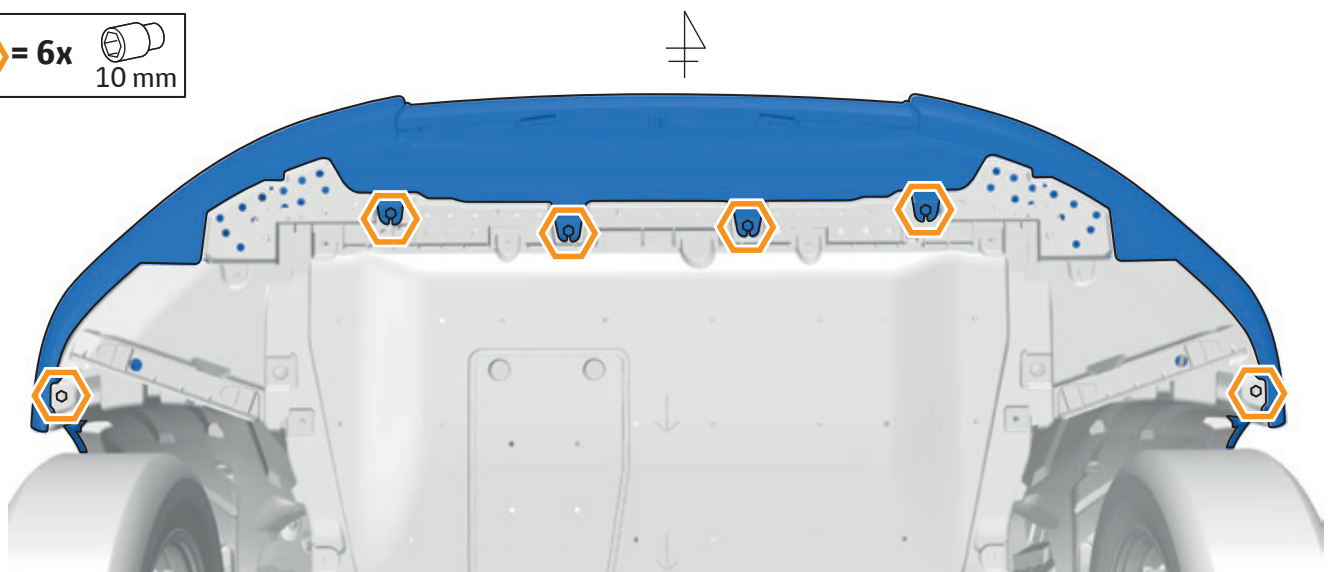


4

1

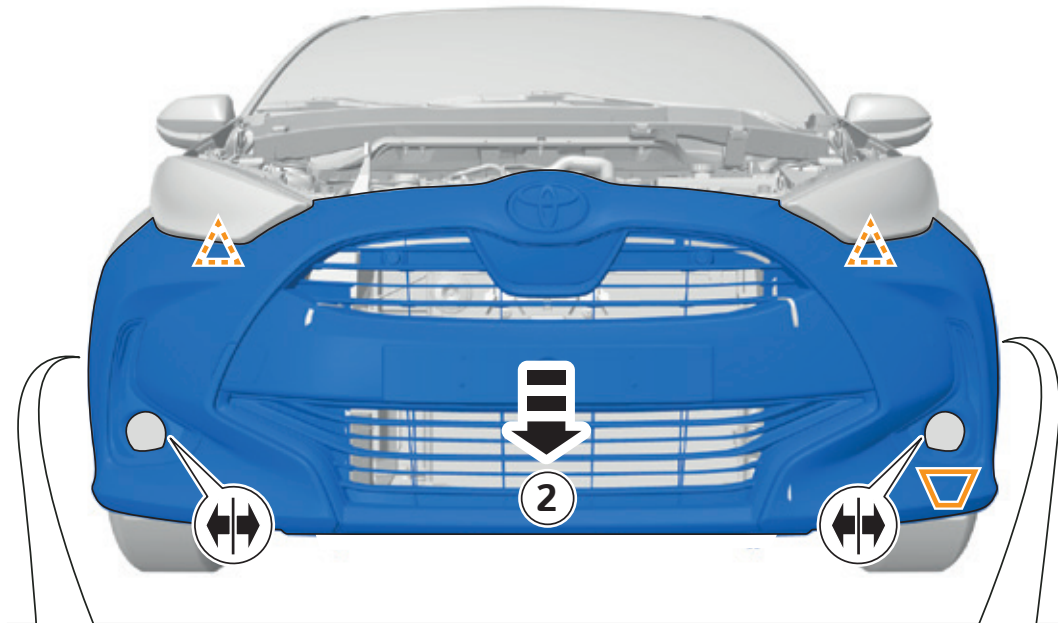


LHS=RHS


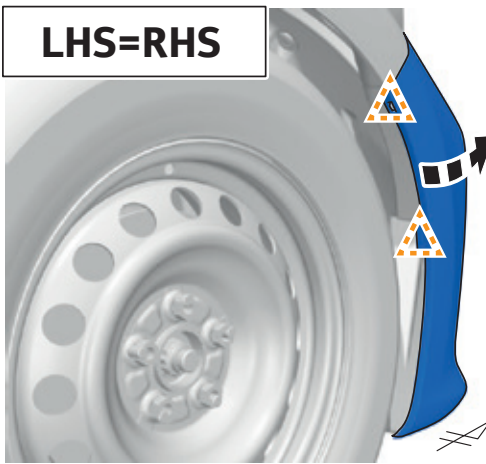


5


1

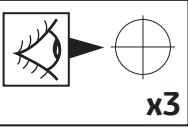

x3

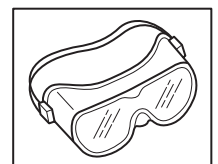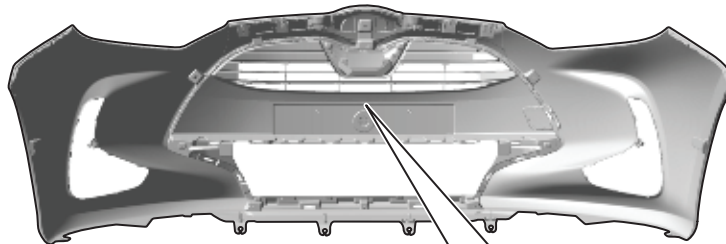


2

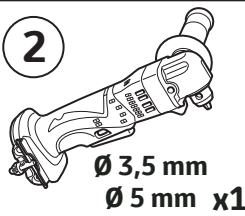


3




2

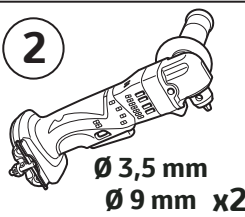


3

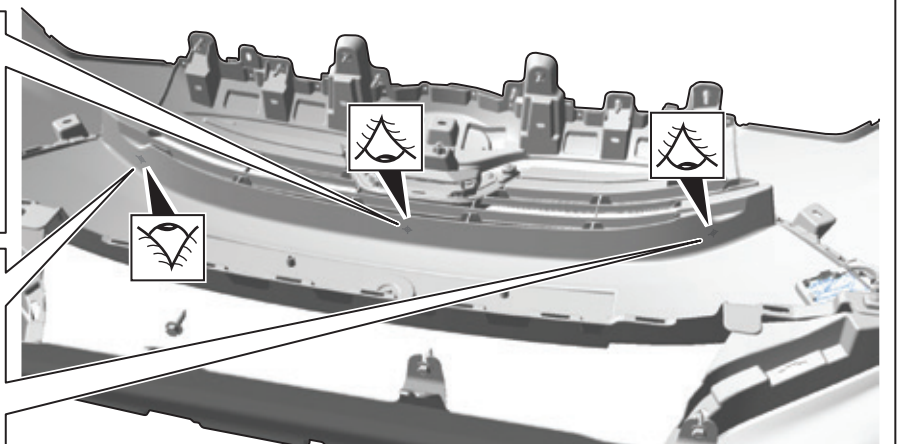


6

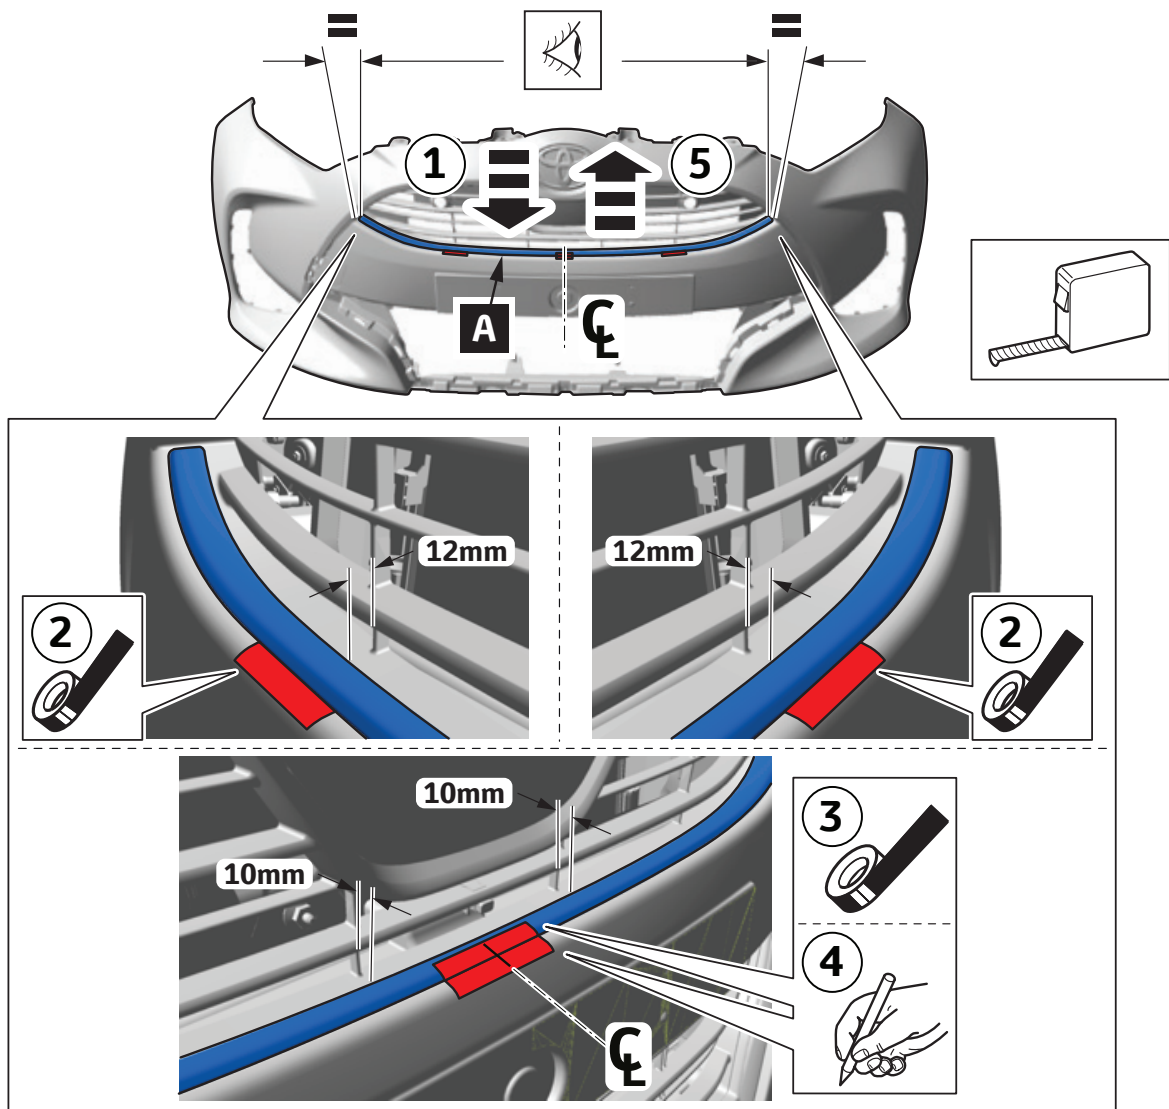

7


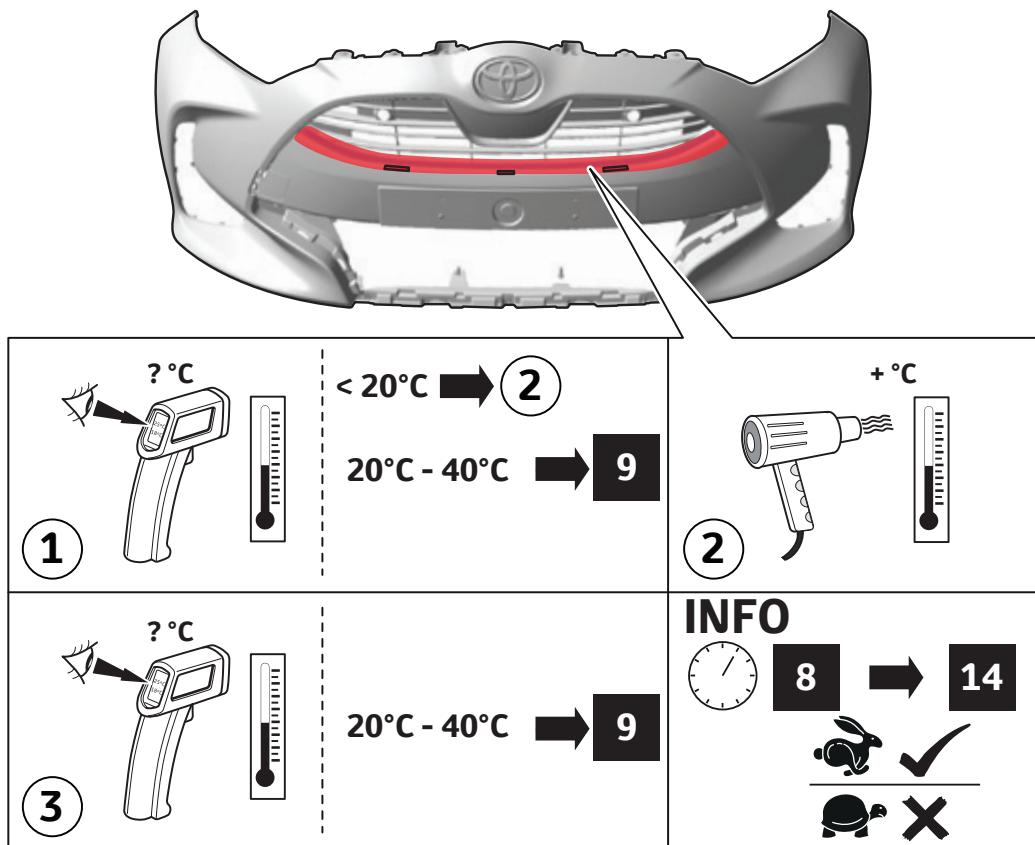


8

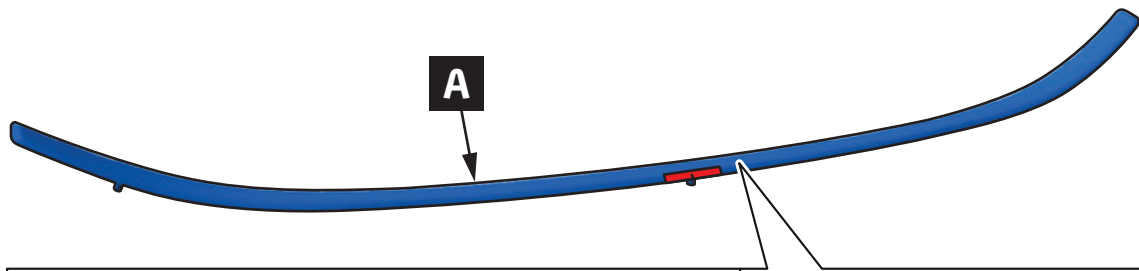


<p>1</p>	<p>< 20°C → 2</p> <p>20°C - 40°C → 10</p>	<p>2</p>
<p>3</p>	<p>20°C - 40°C → 10</p>	<p>INFO</p> <p>9 → 14</p>

9

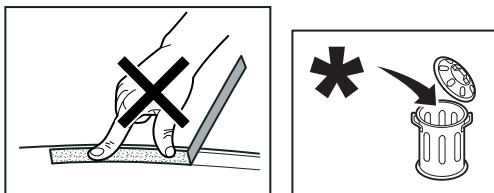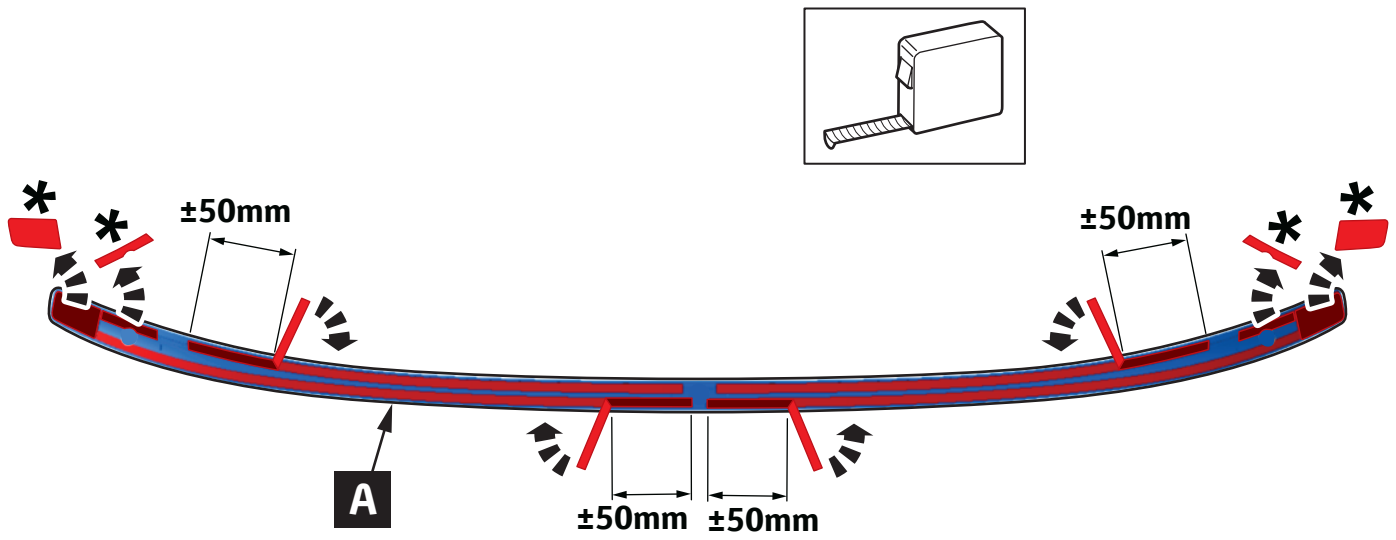

10

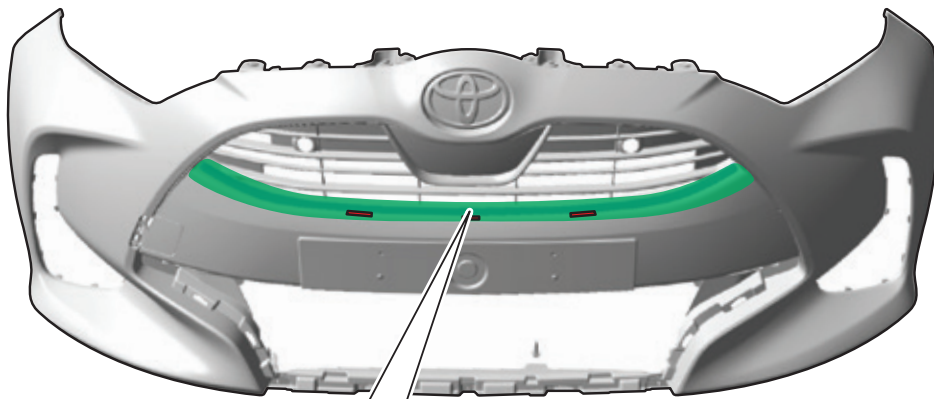

<p>①</p> <p>CLEANER / DEGREASER</p>	<p>②</p>	<p>③</p> <p>C</p> <p>Adhesion Promoter</p>	<p>④</p> <p>→ 14</p> <p>≥ 45 sec. < 1 hour</p>
---	----------	---	--

11

①

①

A

B

②

②



②

B


A

x3


12

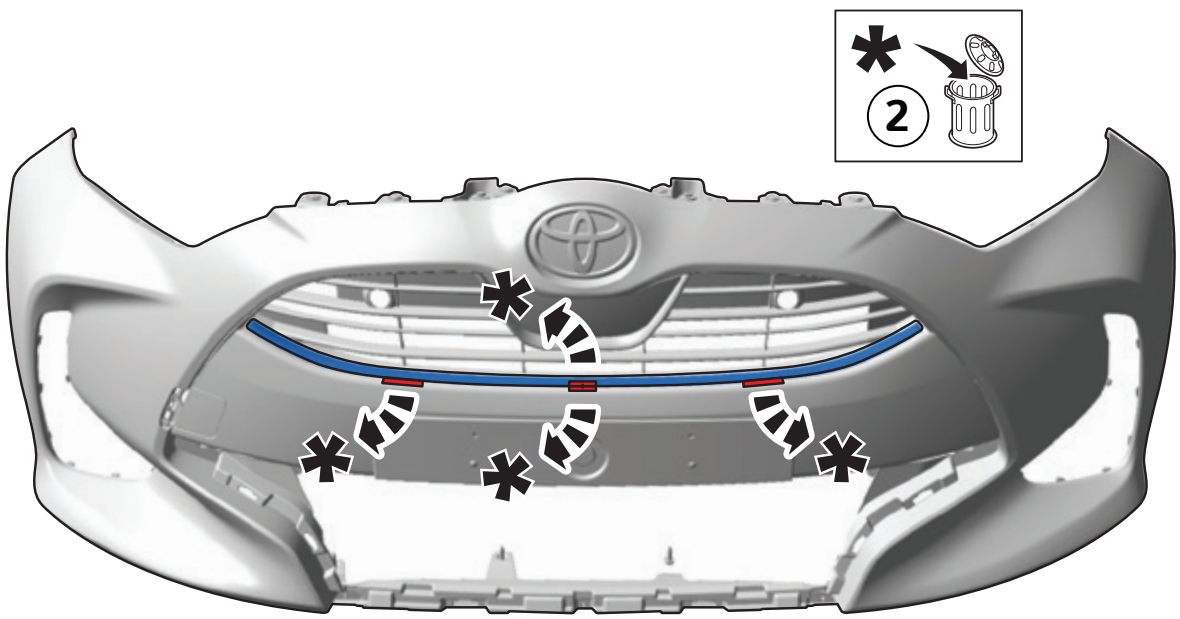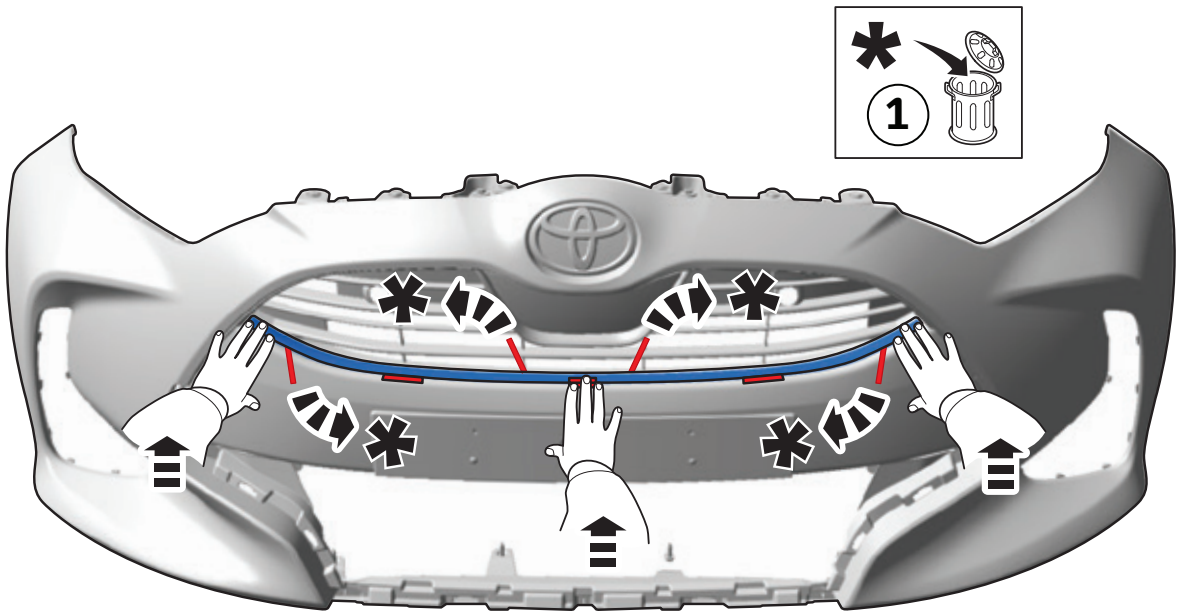




13

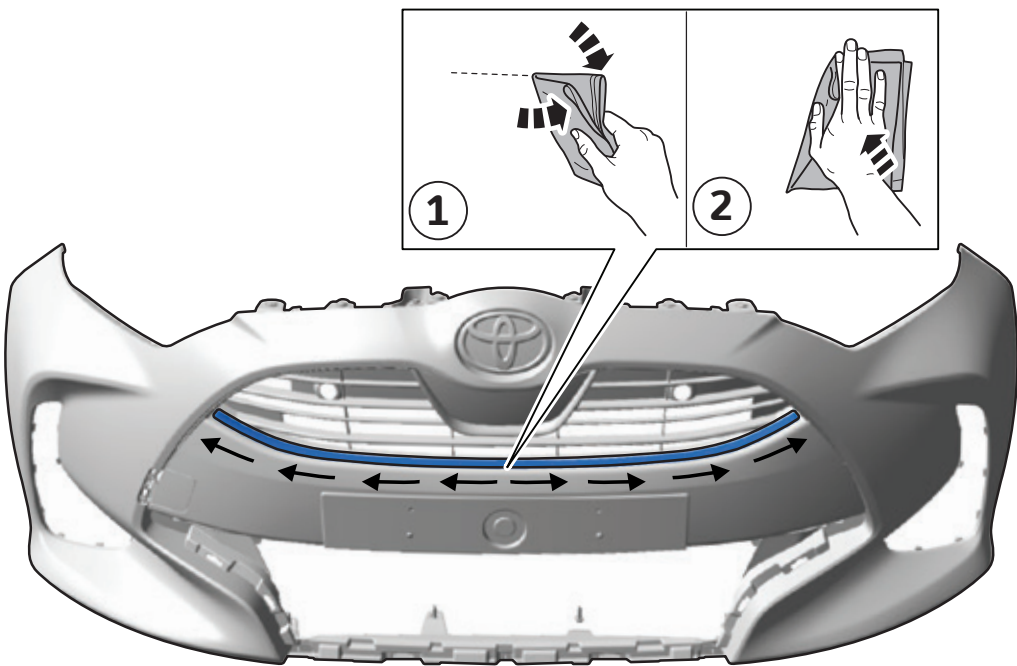



14

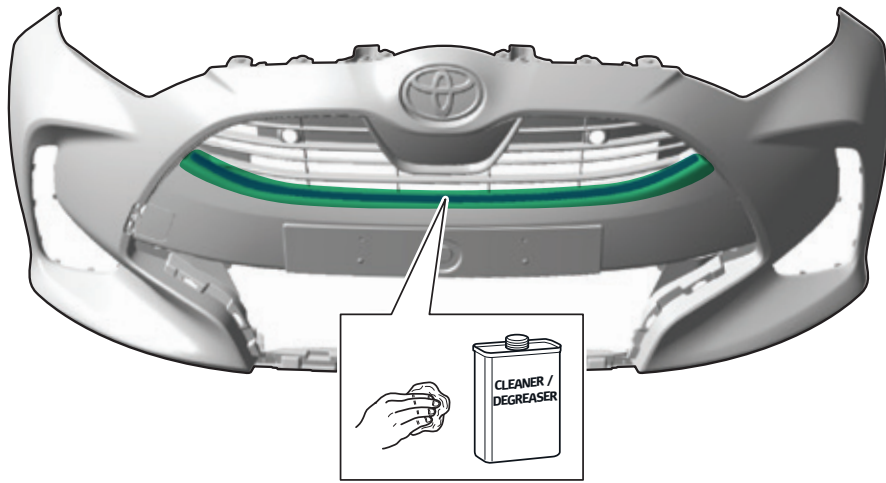

15





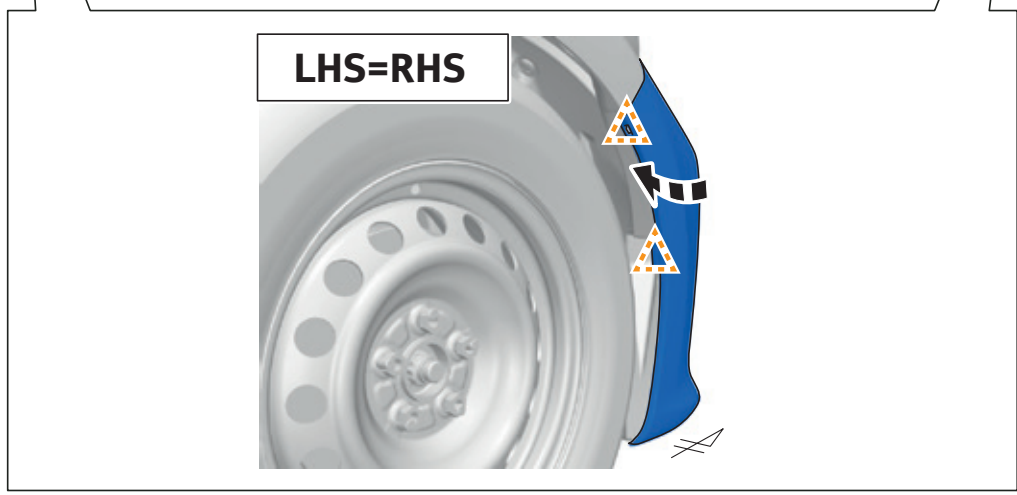
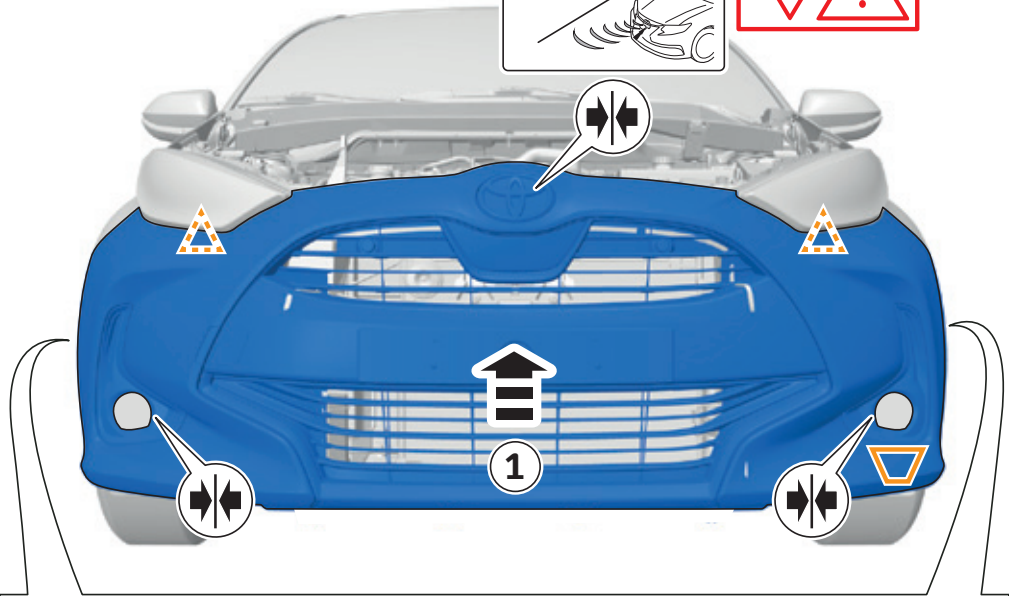
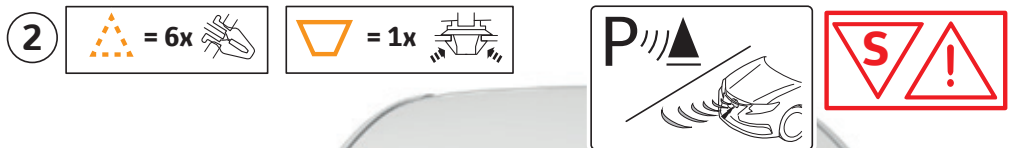


16

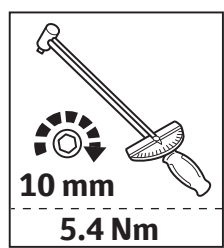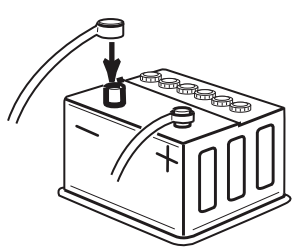

17

INFO

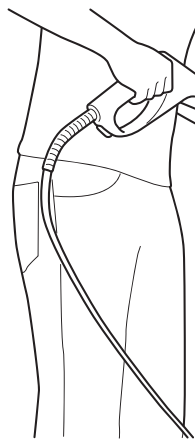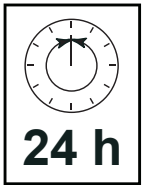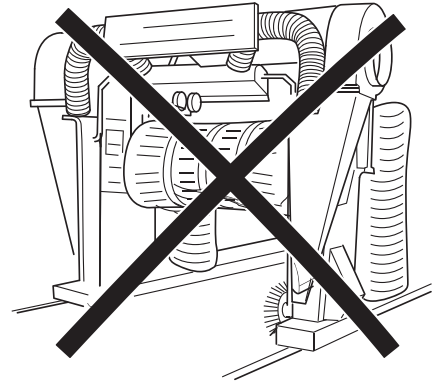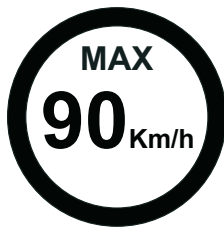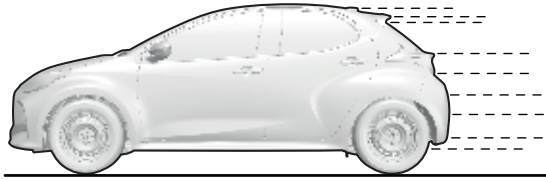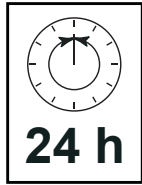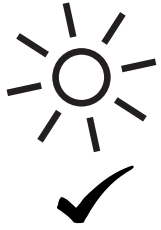

**Minimum
0.5m.**





TOYOTA

CHECK SHEET

Page 1 of 2

Yaris

Model/Year

As from 2020/06

Front bumper garnish

VIN n°


--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

ALWAYS A BETTER WAY

DURING INSTALLATION

1

P/N = OK

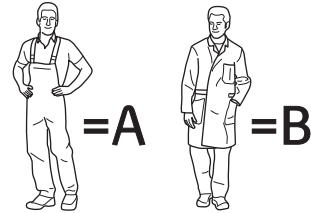

2

3


5,4 Nm

Click


Serial Number


--	--



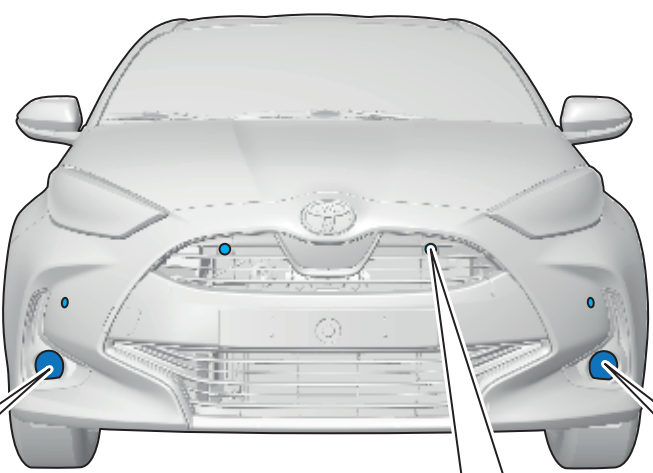


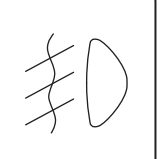
1


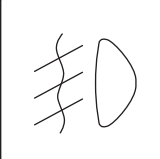






= OK



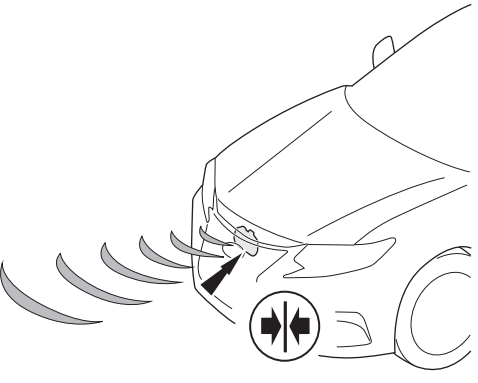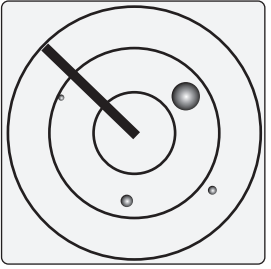




2





= OK


A **B**

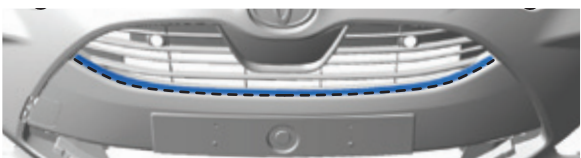


3

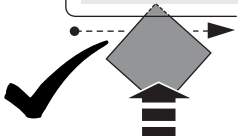

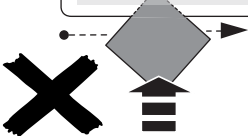



= OK

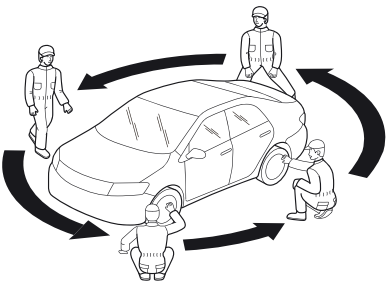

4

Installation Date:

... / ... / ...

Technician Name & Signature:

Stamp: